

# sideKick HD



## User Manual

Version  
1.1.1



1151 Duryea Avenue Irvine, CA 92614, USA  
Phone (949) 852-8404 Fax (949) 852-1226  
[www.ffv.com](http://www.ffv.com)

The design of the sideKick HD and the sideKick HD manual is proprietary.  
No part of the sideKick HD Manual may be copied or modified without the written consent of Fast Forward Video, Inc.

Printed in the U.S.A.  
April 2012

# Table of Contents

- Important Notice .....4**
- Overview.....5**
- Quick Start Guide .....6**
- Drive Installation.....7**
- Connections.....8**
- Front Panel Controls .....9**
- The Screen Scheme .....10**
- The Monitor Screen..... 11**
  - Record Mode**
  - Playback Mode**
    - Jog / Scrub / Turbo**
- The SET-UP Menu.....12**
  - Volume**
  - Audio Output**
  - Record Mode**
  - Video Input**
  - Audio Input**
  - Video Standard**
  - Loop Playback**
  - CLIP MANAGEMENT access**



<b>The SET-UP Menu (continued) .....</b>	<b>13</b>
<b>Codec</b>	
<b>Time</b>	
<b>Date</b>	
<b>Factory Defaults</b>	
<b>Firmware Version</b>	
<b>Serial Number</b>	
<b>The CLIP MANAGEMENT Screen .....</b>	<b>14</b>
<b>Clip Window</b>	
<b>Clip List</b>	
<b>Re-Name Clip</b>	
<b>Name Next Clip</b>	
<b>Delete Clip</b>	
<b>Formatting the Drive .....</b>	<b>15</b>
<b>Updating Firmware .....</b>	<b>16</b>
<b>Post Production .....</b>	<b>17</b>
<b>Specifications .....</b>	<b>18</b>
<b>Limited Warranty .....</b>	<b>19</b>

## Important Notice

### STATIC PRECAUTIONS:

The sideKick HD has been built to meet the demands of a video production environment. However, the hardware is subject to the same dangers from static as any other electronic device. Use care when connecting or disconnecting cables.

### IMPORTANT:

Take care not to introduce any moisture into the unit.

### CLEANING AND HANDLING:

The unit should only require dusting with a soft cloth. Solvents may harm the painted surface and leak to the inside causing severe damage.

### PACKAGE CONTENTS:

- 1 – sideKick HD unit
- 1 – AC Adapter
- 1 – USB to SATA Drive Cable
- 1 – User Manual

### PLEASE RETAIN THE ORIGINAL SHIPPING CARTON:

If you need to return the unit for service or upgrade it is **STRONGLY** recommended that you use the original packaging, which was specifically designed to protect it from damage while in transit. **IF RETURNED IN SOMETHING OTHER THAN ORIGINAL PACKAGING, A FEE WILL BE ASSESSED FOR THE USE OF NEW SHIPPING MATERIALS WHEN THE UNIT IS RETURNED BACK TO YOU** (a protective metal shipping case is acceptable).

### TECH SUPPORT:

If you experience any problems with the unit, please visit Fast Forward Video's technical support page - <http://www.ffv.com/tech-support>. **DO NOT ATTEMPT** to repair or modify the unit as this might cause further damage, which could void your warranty. A technician will determine whether your problem is caused by a faulty component, and decide whether you need to return it for evaluation and/or repair.

### FCC Information to the user:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2). This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case, the user will be required to correct the interference at his/her own expense.

Ease your production workflow with a versatile recording solution that the whole production team can agree on. sideKick HD is a camera-mountable High Definition digital video recorder that gives you the freedom and flexibility to:

- Capture high quality video from your HD-SDI or HDMI capable camera.
  - up to 220 Mbit/s (codec dependent)
  - 4:2:2 sampling
  - 10-bit precision
- Record directly to high quality NLE preferred codecs, eliminating timely capturing, rendering and extra transcoding, any of which may degrade image quality.
- Be sure you've got the shot with the 4.3" on-board confidence monitor, which provides simple playback options including clip selection, scrub and jog. Use this monitor block or compose your shots. This display has a pixel resolution of 480 x 272 even though the image is being recorded at the resolution of the chosen video standard.
- sideKick HD uses non-proprietary 2.5" Solid State Drives (SSD).
- Mount the sideKick HD anywhere with the standard 1/4" 20 mount and ample power options including variable voltage battery input from 6-18 volts DC or from AC line voltage using the included power adapter.
- Recording can commence by pressing the big red Record button, or sideKick HD can be set to sense incoming time code from the camera and automatically start/stop recording when the camera's time code starts and stops. Frame Rate and Video Resolution can also be set automatically with sideKick HD's sensing capabilities.
- sideKick HD allows for a variety of preferred recording codecs. Authors of popular codecs require license fees per distributed copy, so with FFV's Codec Download Program you only purchase the codecs you need for your own individual workflow.
  - Apple ProRes 422 (this codec ships with the product)
  - Apple ProRes 422 (HQ) (this codec ships with the product)
  - Avid DNx HD (available now via purchase from [ffv.com](http://ffv.com))



More codec options will become available via purchase from FFV, including:

- AVC Intra (available in the future via purchase from [ffv.com](http://ffv.com))
- XDCam (available in the future via purchase from [ffv.com](http://ffv.com))

## Quick Start Guide

- 1. Apply Power** – Either plug the AC power adapter (transformer) into a 110 VAC wall socket and connect the locking connector (mini XLR) to the POWER port located on the bottom of the unit, or connect a battery power cable (not included) to an acceptable 6-18VDC battery system and its locking connector (mini XLR) to the POWER port located on the bottom of the unit.  
(Please note special battery mount cables are available as an accessory from [www.ffv.com](http://www.ffv.com).)
- 2. Turn On sideKick HD** - Turn POWER on by sliding down the recessed switch located on the right side of the unit.
- 3. Install Drive** – Slide the 2.5” solid-state drive (SSD) into the drive slot located on the back of the unit. You will feel the drive secure to the connection within the unit and if the unit is on, the disk icon located on the MONITOR SCREEN will turn white. Wait a moment while the recorder reads the drive, this will take a few seconds, perhaps longer if there is a lot of video on the drive. If the drive icon remains red or a DRIVE REMOVED warning message appears see DRIVE INSTALLATION for additional details.  
\*Please note it is normal for the drive enclosure to get warm; it quickly reaches a maximum temperature and will not exceed recommended temperature throughout use.
- 4. Connect source** – Connect to camera or another source using either HD-SDI input (bottom) or HDMI In (left side) and analog audio inputs (left side) if needed.
- 5. SET-UP Menu Setting** – Press the MENU button once to enter the SET-UP menu which allows you to set the Video Standard, Codec, Video and Audio Input, Auto Record, and Audio Output. Use the scroll wheel to move through the menu options and the wheel's center black button to select your settings. See SET-UP Menu (page 12) for additional details.
- 6. Format Drive** - If the drive is new, it should be formatted. From the MONITOR SCREEN, press the MENU button once to access the SET-UP Menu and using the scroll wheel, scroll to FORMAT DISK on the second screen. Press the black center button on the wheel once, highlight FORMAT, select by pressing the black center button. A warning message will appear, highlight OK by using the wheel, select by pressing the black center button. A "Formatting Disk" pop-up message will be displayed during the formatting process. When formatting is complete, you're ready to record.
- 7. Record** – Press the big red REC button to start recording and press STOP (■) to stop recording. Each REC and STOP will create a separate clip. Please note: if the Auto Record feature is set to FOLLOW CAMERA TIME CODE the unit will start and stop recording based on the rolling time code from the camera instead. See SET-UP Menu (page 12) for additional details.
- 8. CLIP MANAGEMENT Screen** – Press the MENU button once to enter the SET-UP Menu. Scroll down to Clip Management and press the black center button on the wheel. Use the scroll wheel to move through the clips and select a clip by pressing the wheel's black center button. Press the play button (▶) to play a clip within the clip window. Other menu options include the ability to rename and delete clips. Of course, clips can be played from the MONITOR SCREEN as well.
- 9. Remove Drive** - Drives can be removed or inserted with the unit's power on or off. Make sure the video is stopped. Hold the securing tab on back of the unit while sliding the drive out. You can now connect the drive to a NLE or computer system using the provided USB to SATA cable to download files.
- 10. Turn Off sideKick HD** - POWER off sideKick by sliding down the recessed switch on the right side of the unit and holding for five seconds.

The Solid State Drives (SSD) used by sideKick HD are not proprietary. We do recommend that you use only the drives recommended by Fast Forward Video. See the sideKick HD webpage ([www.ffv.com](http://www.ffv.com)) for a list of recommended drives, their part numbers and vendors. These drives have been tested and proven to have the best performance and reliability.

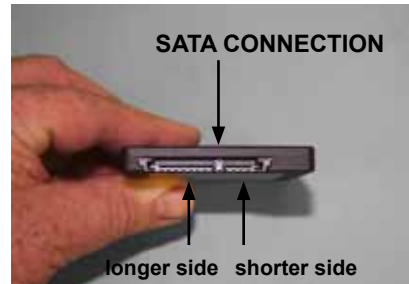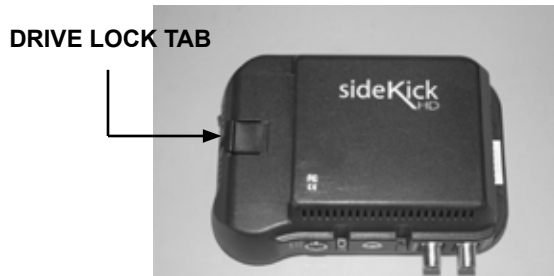

Install a drive into sideKick HD using the following procedure:

1. The SATA connection has a shorter side and a longer side. Hold the drive with shorter side above the longer side.
2. Place the drive with the SATA connection towards the entrance of the drive bay located on the back of the unit (figure 1).
3. Gently slide the drive into the drive bay until you feel a connection, which will align the end of the drive with the drive lock tab located on the back of the unit don't force it but make sure it is secure (figure 2).
4. Turn the unit on by sliding down the power button located on the right side of the unit for one second.
5. Drive recognition will take a moment. When the drive is activated, the Drive Space Icon in the upper right corner of the LCD will turn white\* (figure 3).



figure 1



figure 2


\*If the Drive Space Icon is green it means the drive is empty and needs to be formatted (see FORMATTING THE DRIVE page 15).

\*If you are using a new drive and the Drive Space Icon is Red there is a problem. You will need to format the drive before proceeding (see FORMATTING THE DRIVE page 15).



figure 3

## Connections

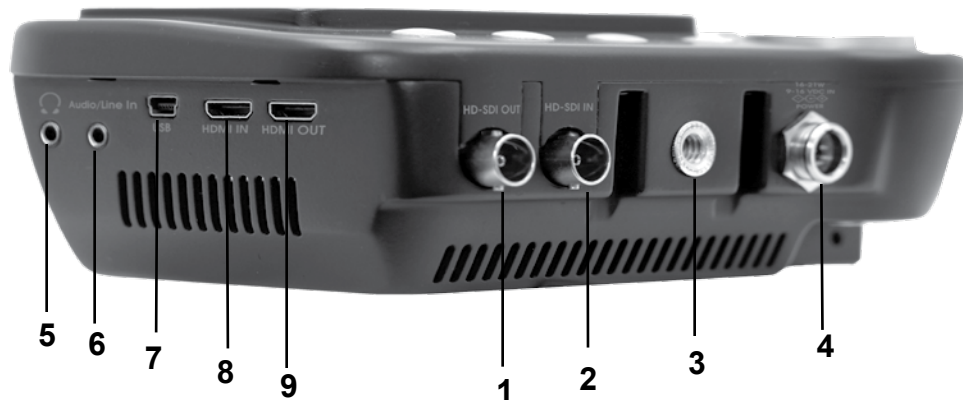

### Bottom

1. **HD-SDI Output** (BNC connector) - Route HD video and embedded audio output signal to a monitor or another external device. Output is hot regardless of input being HD-SDI or HDMI.
2. **HD-SDI Input** (BNC connector) - Input HD-SDI uncompressed video with embedded audio and time code from a camera or other source to record and display.
3. **Standard 1/4" 20 Mount** (threaded screw hole - female) - Allows sideKick HD to be mounted to a camera using a hot shoe adapter, or an adjustable arm, as well as a tripod, 15mm rail rig or any support system using a standard 1/4" 20 mount.
4. **Power** (locking Mini XLR connector) - Variable voltage power supply requirements 6-18VDC, consumption 3-21W. Power changes with different modes (i.e. record vs. pass-thru) and fan changes due to temperature.

### Left Side

5. **Headphone Jack** (3.5mm stereo jack connector) - Audio output for monitoring.
6. **Audio/Line In** (3.5mm stereo jack connector) - Records 2 line level analog audio channels replacing embedded audio channels 1 and 2.
7. **USB** (USB-C port) - FOR FUTURE USE.
8. **HDMI In** (HDMI mini connector) - HD video and audio input from a camera or other source to record and display.
9. **HDMI Out** (HDMI mini connector) - Route HD video and embedded audio output signal to a monitor or another external device. Output is hot regardless of input being HD-SDI or HDMI. Yes you can input HD-SDI and monitor via HDMI simultaneously or HDMI in to HD-SDI out, Cool, huh?





1. **Rewind / Previous Clip** (◀◀) - Press this button to move to the head of the current clip or to the previous clip.
2. **Fast Forward / Next Clip** (▶▶) - Press this button to move to the head of the next clip or the end of the very last clip.
3. **Play** (▶) - Press this button to play the current clip.
4. **Stop** (■) - Press this button to stop recording (REC mode), stop playback of the current clip (PLAY mode), or cue back to the last play position and pause (LIVE mode).
5. **Menu** (i) - from MONITOR SCREEN (LIVE view or PLAYBACK view), press this button once to enter the SET-UP MENU.
6. **Scroll Wheel** - Use this wheel to move through the video clip in either a JOG or SCRUB fashion. Also used for navigating through the menus.
7. **Center "Select" Button** - Used to switch between the playback modes, JOG (single frame at time), SCRUB (fast forward and rewind), and TURBO (very fast forward and rewind). Also used to select menu choices.
8. **Live / Cancel** (x) - Press this button to return to live camera (pass-thru) from the PLAYBACK view. Also used to cancel out of menu choices without changes.
9. **Record** - When the Record Mode from the SET-UP Menu is set to Manual, press this button to begin recording. Use the STOP button to stop recording and complete the clip.
10. **LED Indicator** - This Light will appear RED when Recording, YELLOW in Playback and Menus, and GREEN when in Live View.
11. **Power Switch** - This switch is recessed and on the right side of the unit. Slide down and hold 1 second to power on or slide down and hold 5 seconds to power off.

# The Screen Scheme

sideKick HD has a few different screens, each with its own purpose.

The **MONITOR Screen** is your main operational view. This screen will be used for a few things, such as camera pass-thru, a confidence monitor when recording and basic playback of clips.




The MONITOR Screen

The Menu (i) Button



The LIVE (x) Button

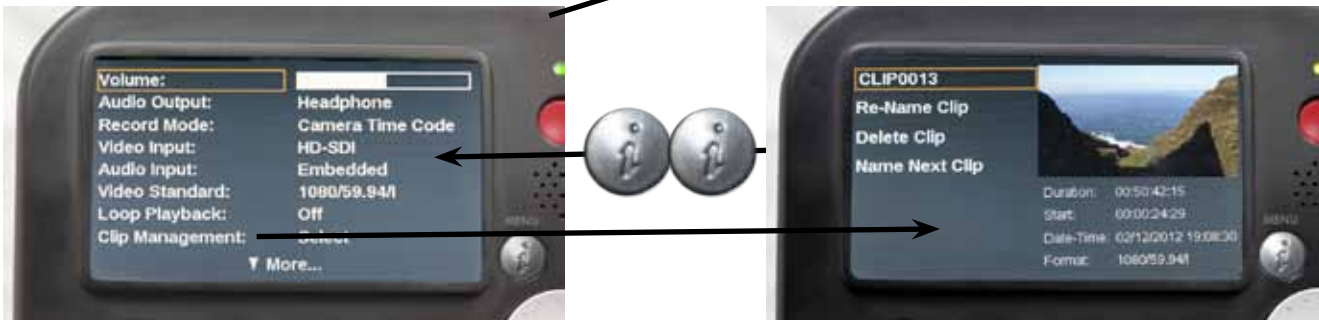

The SET-UP Menu

The CLIP MANAGEMENT Screen

The **SET-UP Menu** has a variety of recorder configuration settings.

The **CLIP MANAGEMENT Screen** deals with operations involving the clip, such as selecting, naming or deleting clips.

Pressing the MENU(*i*) button moves you to the **SET-UP Menu**.

The **CLIP MANAGEMENT Screen** is accessed by scrolling down in the SET-Up Menu and selecting CLIP Management by pressing the black center SELECT button of the scroll wheel.

**SHORTCUT:** If you want to go directly to the **CLIP MANAGEMENT Screen** from the **MONITOR Screen**, Press the MENU(*i*) button + LIVE(*x*) button at the same time.

To get back to the **MONITOR Screen** press the LIVE(*x*) button.

# The Monitor Screen

## MODE Indicator

(LIVE / REC / STOP / PLAY)

Time Code

Video Standard

Drive Space Icon

LED



The MONITOR Screen

The **MONITOR SCREEN** has three primary functions:

1. **LIVE VIEW** also known as Camera Pass-thru, is used for monitoring what you are *going* to shoot. Pressing the LIVE button returns to this view from menus as well as the PLAYBACK mode.
2. In **RECORD MODE**, this screen is used as a confidence monitor so the Camera Operator *knows* what is actually being recorded. The only button that works when recording is STOP(■).
3. In **PLAYBACK MODE**, the operator can play clips forward normally (▶), JOG one frame at a time in either direction, SCRUB (1 sec) or TURBO (10 sec) to play clips in fast forward or reverse. The scroll wheel controls the motion and the black center SELECT button switches between JOG, SCRUB and TURBO.



Live View  
Camera Pass-thru  
Green LED



Record Mode  
Confidence Monitor  
Red LED



Playback Mode - Jog  
Yellow LED



Playback Mode - Scrub  
Yellow LED

The Drive Space Icon turns yellow and then red as the drive approaches 100% utilization.

## The SET-UP Menu



Access this 2 page **SET-UP Menu** by pressing the MENU button once from the **MONITOR Screen** or twice from the **CLIP MANAGEMENT Screen**. This menu contains all of sideKick HD's configuration settings. Navigate this menu by moving through the fields with the scroll wheel and select the item to be modified by pressing the black center SELECT button on the wheel.

### Page 1

**Volume** - Adjust the volume of the audio output with this option. Both the external speaker and the headphone volume are managed by this option.

**Audio Output** - Your choices here are OFF, HEADPHONE or SPEAKER. Choose HEADPHONE to engage the headphone jack and turn off the external speaker. Choose SPEAKER to allows audio output to be heard from the front side speaker or choose OFF for no audio output at all.


**Record Mode** - Choose either MANUAL or CAMERA TIME CODE. Choosing MANUAL requires the operator to push the red RECORD button on the front of the unit to initiate recording and the STOP (■) button to complete the clip. If the attached camera is providing timecode through the video input, choosing CAMERA TIME CODE will allow sideKick HD to start and stop recording based on rolling timecode coming from the camera. If CAMERA TIME CODE is selected, the red RECORD button from the front of the unit will not operate the record function.

**Video Input** - Determine whether the signal to be recorded is coming from the HD-SDI or the HDMI input. No matter which is chosen here, both HD-SDI and HDMI outputs are always available.

**Audio Input** - EMBEDDED or ANALOG. If you choose ANALOG you must have your analog audio input connected to the AUDIO / LINE In port on the left side of the unit. It is an unbalanced analog connection. Using this input will replace embedded audio channels 1 and 2 with the analog inputs. EMBEDDED uses the digital signal coming in with the video signal.

**Video Standard** - This setting allows you to specify the incoming video source signal for the next clip to be recorded as well as the next clip to be played. It is highly recommended to leave it on **Auto-Detect**. If the user-selected signal choice does not match the actual incoming signal, video WILL NOT be recorded properly and clips will not playback. Why worry, let us do the hard work!

Available Formats		
1080 / 29.97 /P	1080 / 59.94 /I	720 / 59.94 /P
1080 / 25.00 /P	1080 / 50.00 /I	720 / 50.00 /P
1080 / 23.98 /P		720 / 29.97 /P
1080 / 23.98 /PsF		720 / 25.00 /P
		720 / 23.98 /P

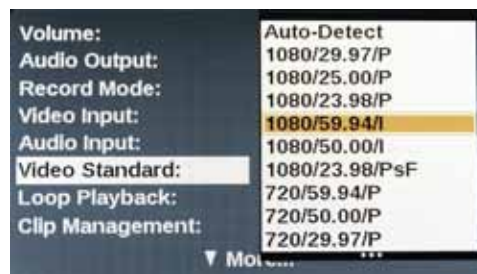

**Note** - If you choose the video standard by yourself, as opposed to using Auto-Detect, check the **LIVE mode** for a video signal. If you see pass-thru video, your standard choice and incoming video are properly matched. If no video feed is seen in **LIVE mode** the video standard choice is incorrect.



## The SET-UP Menu (continued)

**Loop Playback** - The choices here are simply ON or OFF depending on whether or not you want your list of clips to continue playing again once it gets to the end of the list.

**Clip Management** - This choice takes you to the CLIP MANAGEMENT Screen (see Page 14)



### Page 2

**Codec** - sideKick HD is a multi-codec capable recorder. To select a codec for the next clip to be recorded in, scroll through the installed codecs in this list. This selection does not change the codec for an already recorded clip.

sideKick HD ships with Apple's ProRes 422 codec. Other codecs such as ProRes 422 HQ and DNxHD are available. However, since codecs are the intellectual property of the writers who created them, individual license fees must be paid for each installed use. Instead of charging everyone for all the codecs and raising the price of sideKick HD, Fast Forward Video has made the additional codecs available for purchase on our Web Site. This way you only pay for the codecs you need for your specific workflow. See FIRMWARE UPGRADES in this manual or [www.ffv.com](http://www.ffv.com) for the proper procedure.

**Time** - The format for Time is HH:MM:SS, SS or seconds are set to zero when you set the other time elements. In order for your clips to be appropriately time-stamped, enter the current time in the proper format.

**Date** - The format for Date is YYYY-MM-DD. In order for your clips to be appropriately date-stamped, enter the current Date in the proper format.

**Factory Defaults** - This field will reset the configuration back to the factory defaults via a confirmation pop-up window. ALL custom changes will be reverted back to factory settings.

**Firmware Version** - This field is not selectable. It states the current firmware version that is installed in the unit. Firmware updates are available via [www.ffv.com](http://www.ffv.com). For update procedure see page 16.

**Serial Number** - This field shows the unit's Serial Number. This number should also be on the back side exterior of the unit. For any type of service or phone support you may be required to provide this information.



## The CLIP MANAGEMENT Screen

When you press the MENU button, you will be in the **SET-UP Menu**. Using the scroll wheel, scroll down to **CLIP MANAGEMENT** and press the wheel's center black SELECT button.

The **CLIP MANAGEMENT Screen** features options pertaining to the clips themselves such as naming and deleting clips. Navigate this screen by turning the scroll wheel.

**CLIP NAME** - Use this field to select or change the clip to be modified. Clips can also be played and navigated using the ◀◀ and ▶▶ buttons while in this view. Press the center black SELECT button on the scroll wheel to select the list and see a drop down listing of all the clips on the current disk.

**CLIP LIST** - Use the wheel to scroll through the list and then press the SELECT button once again to choose a particular clip. The clip will now show in the clip window, and the duration time code will be displayed. If your **CLIP LIST** contains more clips than can be shown in one window, an ellipsis (...) indicator will show indicating more clips.

The ◀◀ and ▶▶ buttons become Page Up and Page Down buttons when the list is long enough.

**RE-NAME CLIP** - Pressing the center button on the scroll wheel when this field is highlighted will bring up another window displaying the alphabet and some symbols. Navigating and selecting characters with the scroll wheel will allow you to name clips with meaningful words rather than just sequential clip IDs. Note that the physical buttons are used for Backspace (◀◀), Delete All (▶▶), Set(▶) and Cancel name changes(■).

**DELETE CLIP** - Selecting this field will prompt you for a confirmation and upon that confirmation the selected clip will be removed from the drive.

**NAME NEXT CLIP** - Selecting this field will allow you to name the next clip to be recorded. If the new name ends with a number, subsequently recorded clips will have the same name with the next sequential number (e.g. Awards01, Awards02, Awards03, etc.). The unit will increment only as many numerals as provided: if given "Clip 1" it will stop at "Clip 9", if given "Clip 01" it will stop at "Clip 99". Also the user must set the clip name every time they format (or change) the drive.



SET-UP Menu



CLIP MANAGEMENT Screen



CLIP LIST

ellipsis (...) indicator



CLIP Naming Alphabet

All new drives need to be formatted before recording can be initiated. Please note that the drive space icon will be red until the new drive is formatted properly.

1. From the **MONITOR Screen**, press the MENU button once – this will take you to the **SET-UP Menu**.
2. Use the scroll wheel to go down to the second page of the **SET-UP Menu**. Highlight “FORMAT DISK” and press the center black selection button on the scroll wheel to initiate the command.
3. A pop-up "question" window will appear – use the scroll wheel to highlight “FORMAT” to proceed with formatting the disk or “CANCEL” to exit at this time.
4. Press the center black SELECT button on the scroll wheel to select your choice.

If you choose to proceed with the formatting, a second pop-up "warning" window will appear – use the scroll wheel to highlight “OK” and press the center black selection button on the wheel.

5. A Formatting Disk window with a progress bar will be displayed until the formatting is complete.

When a disk is having a problem loading files: Pressing MENU(*i*) + LIVE(*x*) + STOP(■) while viewing the **MONITOR Screen** pops up an "unformat" window, which will erase the entire disk including the FFV format so it can be re-formatted...



LIVE View, Drive Space Icon RED



SET-UP Menu



1st Format Pop-up, Question



2nd Format Pop-up, Warning



## Updating Firmware

Firmware maintenance releases and upgrades are posted to our website as they become available. Customers have access to maintenance releases at no charge for the lifetime of the product. Upgrades and new codecs are available for a fee. Please check our Web Site regularly to keep your sideKick up to date.

New firmware files are located at:

<http://www.ffv.com/sidekick-hd-firmware/>

1. Locate the latest revision of sideKick HD firmware on [www.ffv.com](http://www.ffv.com).
2. Download the firmware file to your computer system and then copy it to a solid state drive (SSD) that will be used in the sideKick HD.
3. Install that SSD in the sideKick HD.
4. Power up or re-boot the sideKick HD.
5. Drives with a new firmware file on them will automatically be identified and a message will appear asking if you want to upgrade the firmware.
6. If you do, confirm the request.
7. Wait for firmware to update.
8. Shut power off and restart the unit.



### WARNING:

**PLEASE BE AWARE SOME FIRMWARE UPDATES WILL NOT ALLOW YOU TO PLAY OLD FOOTAGE** (see firmware notes at <http://www.ffv.com/sidekick-hd-firmware/>).




**PLEASE NOTE:** out of the box, sideKick HD produces a QuickTime .MOV file using Apple's ProRes 422 codec and is compatible with any MAC or PC editing software (NLE) that supports that codec.

The video files have been tested by FFV and confirmed compatible with:

- Apple Final Cut Pro 7.0
- Adobe Premiere CS5 and CS5.5 for the Mac

## Moving Clips to an NLE System

1. Connect the Solid State Drive (SSD) to a computer (NLE) using either the provided USB to SATA cable or insert the SSD into an already hooked up SATA drive dock.
2. Wait for your computer to recognize the drive - Once you see the icon that represents the drive, click on the drive icon to see the files. They will have whatever names were given to them when recorded by sideKick HD.
3. Either copy the selected clips to your computer or you can work directly from the SSD. It is safer to use the clips from your NLE's working hard drive than directly from the SSD since you will be removing the SSD to record again.
4. Bring clips into your NLE's project browser or timeline and edit accordingly.
5. It may be helpful to create separate sequences to manage very long clips since sideKick HD's format procedure breaks long clips into sequential 2GB files.

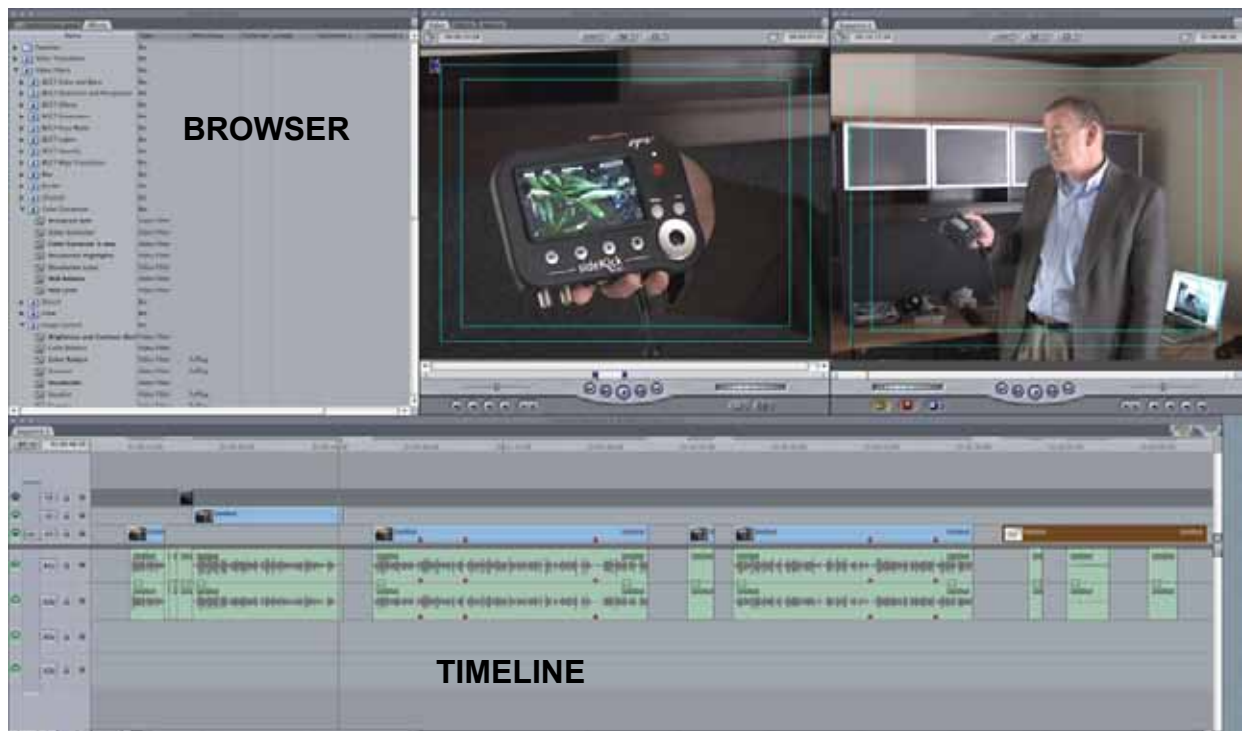

# Specifications

<b>VIDEO INPUT / OUTPUT</b>	
Digital Input / Output	HD-SDI, HDMI
Standards	SMPTE 274 M
	SMPTE 296 M
Connections	BNC 75 Ohms
	HDMI Type C mini
<b>AUDIO INPUT / OUTPUT</b>	
Digital Input / Output	8 channels embedded HD-SDI
Connections	BNC or HDMI unbalanced
Resolution	24 bits
Sampling Rate	48 kHz
Analog Input / Line	2 Line level
Connections	3.5 mm
Resolution	16 bits
<b>DRIVES</b>	
Maximum number of Drives	1 removable
Supported Drive	2.5" SATA SSD
Preferred Drive	see sideKick Page at <a href="http://ffv.com">ffv.com</a>
<b>TIME CODE</b>	Embedded timecode
<b>USB PORT</b>	For future use
<b>HEADPHONE</b>	3.5 mm stereo jack
<b>VIDEO COMPRESSION</b>	
Method	Apple ProRes 422
	Apple ProRes 422 (HQ)
future codecs available	upgradable via <a href="http://www.ffv.com">www.ffv.com</a>
Maximum Bit Rate	220 Mbit/s (codec dependent)

<b>POWER</b>	
Power Supply	12 VDC
Power Connector	Mini XLR
Power Requirement	6-18 VDC
Power Consumption	3-21 W
Power Options	Battery or AC Power adapter
<b>DISPLAY</b>	4.3 color TFT display
Display Resolution	480 x 272 pixel resolution
<b>GENERAL</b>	
Physical Dimensions	6.25"W x 4.2"H x 2.1"D
Weight	10 oz without drive
	12 oz with drive
Noise	<18dB
Operating Temperature	0-40° C
Humidity	90% non-condensing
<b>WARRANTY</b>	1 Year
<b>INCLUDED ACCESSORIES</b>	AC Adapter
	USB -SATA Drive Cable
	User Manual
	Cool Looking Cardboard Box
<b>OPTIONAL ACCESSORIES</b>	DNxHD codec
	120GB Solid State Drive
	300GB Solid State Drive
	Dual Battery Adapter
	External Battery w/ Charger
	Camera Battery Cable
	Carrying Case
	Protective Pouch
	4 to 3 pin Power Adapter
	Camera Shoe to 1/4" 20 Riser

\*Specifications Subject to Change

## Limited Warranty

### Warranty

#### 12 Month Limited Warranty

Fast Forward Video, Inc. warrants to the original purchaser that the product (hardware and components) shall be free from defects in material and workmanship for a period of 1 year from the date of purchase. If a defect covered by this warranty occurs during this 1 year period, Fast Forward Video, Inc. will repair or replace the defective product or component, at its option, free of charge.

If customers register their sideKick HD by mail or on [www.ffv.com](http://www.ffv.com), Fast Forward Video will extend the warranty to two years from the date of purchase. Customers must register their sideKick HD within 30 days (from date of purchase) to receive the extended warranty period.

#### Warranty Limitations

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT: (a) IS DAMAGED BY NEGLIGENCE, ACCIDENT, MISUSE, OR BY OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP; OR (b) HAS HAD THE SERIAL NUMBER ALTERED, DEFACED, OR REMOVED.

ANY APPLICABLE IMPLIED WARRANTIES ARE HEREBY LIMITED IN DURATION TO THE WARRANTY PERIOD DESCRIBED ABOVE. IN NO EVENT SHALL FAST FORWARD VIDEO, INC. BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY IMPLIED OR EXPRESSED WARRANTIES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.